



### **WPR10CL highlights**

- Easy to install
- Can replace any  $\frac{3}{4}$ " diameter rotary tongue lock
- The code wheel can be used clockwise or counterclockwise
- Password can be reset without any special tools in just a few seconds
- Default factory setting '000'

### **Password set instructions**

- The lock should be in unlocked mode
- Turn the code wheel until the code set pin is seen from the bottom hole of the code wheel
- Press in the code set pin with a small screwdriver or similar
- Turn the code wheel dials until the new password number is formed
- Release the screwdriver from the code set pin. The new password is now set
- Turn to the locking position, and rotate one or all code wheel dials to lock the code wheel